

# **HIKVISION**

#### Diagram Reference

#### 1 Appearance

 Screen 
 Microphone 
 Network Interface 
 Alarm Input Terminal 6 Debugging Port 7 Loudspeaker 5 TF Card Slot 8 Power Supply Terminal

The appearance of the device varies according to different models. Refers to the actual device for detailed

#### The debugging port is used for debugging only. 2 Terminal and Wiring

AIN1 to AIN8 : Alarm Input pins. GND : Grounding Interface You should connect alarm input device to the indoor station by connecting any terminals of AIN1 to AIN8 and GND.

#### Note:The power supply must conform to LPS. The record mended adaptor models and manufacturer

Model	Current	Manufacturer	Standard
ADS-26FSG-12 12024EPG		SHENZHEN HONOR ELECTRONIC CO., LTD	CEE
ADS-26FSG-12 12024EPCU/EPC	2A	SHENZHEN HONOR ELECTRONIC CO., LTD	NEMA
ADS-26FSG-12 12024EPB	2A	SHENZHEN HONOR ELECTRONIC CO., LTD	BS
MSA-C2000IC12.0-24P-BR	2A	Moso Power Supply Technology Co.,Ltd.	NBR
MSA-C2000IC12.0-24P-AU	2A	Moso Power Supply Technology Co.,Ltd.	AS
ADS-26ESG-12 12024EPI-01	2A	SHENZHEN HONOR ELECTRONIC CO., ITD	IS

### 3 Installation

**Installation** Accessory Description The wall mounting plate and gang box are required to install the indoor station onto the

There are 2 size of the gang boxes adapted to the device.

Size 1: 75 mm (width)  $\times$  75 mm (length)  $\times$  50 mm (depth). Size 2: 55 mm (width)  $\times$  101 mm (length)  $\times$  38.5 mm (depth).

THe dimension of mounting plate is 97 mm (width) × 104 mm (length) × 3 mm (depth). Before You Start

3

• Make sure the device in the package is in good condition and all the assembly parts are included

 The power supply the indoor station supports is 12 VDC. Or the standard PoE is supported. Please make sure your power supply matches your indoor station. Make sure all related equipments are power-off during the installation.
 Check the product specification for the installation environment.

Wall Mounting with Gang Box (Type I)

1. Cave a hole in the wall. Note: The suggested d ision of the installation hole should be larger than the gang box.

2. Insert a gang box (Type I) to the hole chiseled on the wall. 3. Fix the wall mounting plate to the gang box with 2 screws.

Note: If you install the device with a gang box (75 mm(width) × 75 mm(length) × 46 mm(depth)), the left an right holes will be applied

A. Hook the indoor station to the wall mounting plate tightly by inserting the plate hooks into the slots on the rear panel of the indoor station, during which the lock catch will be locked automatically.

Wall Mounting with Gang Box (Type II) 1. Cave a hole in the wall.

on hole should be larger than the gang box.

2. Insert a gang box (Type II) to the hole chiseled on the wall. Note: If you use the gang box (55 mm(width) × 101 mm(length) × 48.5 mm(depth)). You can install the gang

Fix the wall mounting plate to the gang box with 2 screws.

• If you install the device with the gang box horizontal, the left and right holes will be applied.

• If you install the device with the gang box vertical, the upper and lower holes will be applied. 4. Hook the indoor station to the wall mounting plate tightly by inserting the plate hooks into the slots on the rear panel of the indoor station, during which the lock catch will be locked automatically.

#### 4 Getting Started

Activate Indoor Station


- You are required to activate the device first by setting a strong password before you can use the device.
- Power on the device. It will enter the activation page automatically.
  Create a password and confirm it.
- 3. Tap OK to activate the indoor station.


2 Quick Configuration

- After Activation, you can follow the wizard to complete quick configuration, including language settings, password reset method settings, network settings, indoor station settings, time settings, linked devices settings, etc.
- If you want to enter the wizard page, you can tap Settings  $\rightarrow \stackrel{\boxtimes}{=} \rightarrow$  Configuration, and enter the admin (activation) password. Tap 🖄 to enter the system maintenance page.


Scan the QR code to get the Configuration Guide Scan the QR code to get the Operation Guide for detailed information for detailed information




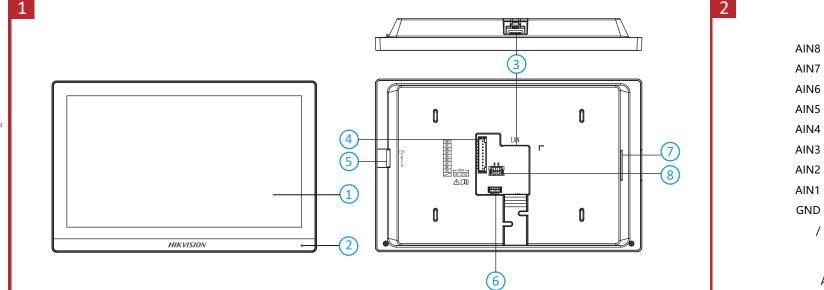

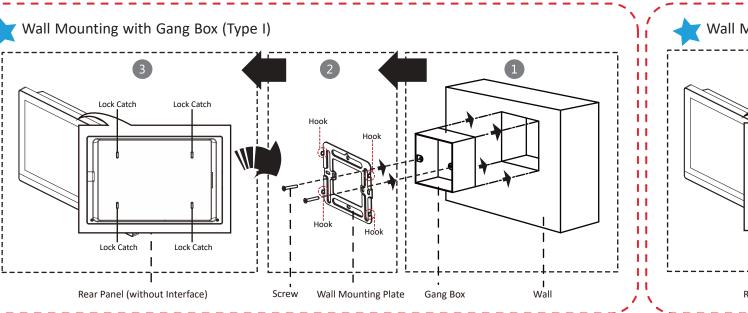



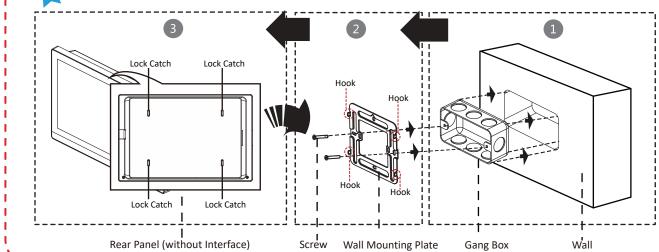

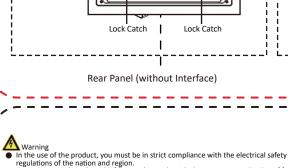

回

3


Lock Catch

regulations of the nation and region. CAUTION: To reduce the risk of fire, replace only with the same type and rating of fuse

- consumption cannot be less than the required value. Do not connect several devices to one power adapter as adapter overload may cause overheat or fire hazard.
- Please make sure that the power has been disconnected before you wire, install or dismantle the device.
- When the product is installed on wall or ceiling, the device shall be firmly fixed.
  If smoke, odors or noise rise from the device, turn off the power at once and unplug the
- power cable, and then please contact the service center. If the product does not work properly, please contact your dealer or the nearest service
- center. Never attempt to disassemble the device yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)

## Caution

- + identifies the positive terminal(s) of equipment which is used with, or generates direct current. + identifies the negative terminal(s) of equipment which is used with, or generates direct current.
- No naked flame sources, such as lighted candles, should be placed on the equipment.
- The USB port of the equipment is used for connecting to a USB flash drive only.
  The serial port of the equipment is used for debugging only.
- Burned fingers when handling the fingerprint sensor metal. Wait one-half hour after
- switching off before handling the parts.
  Install the equipment according to the instructions in this manual.

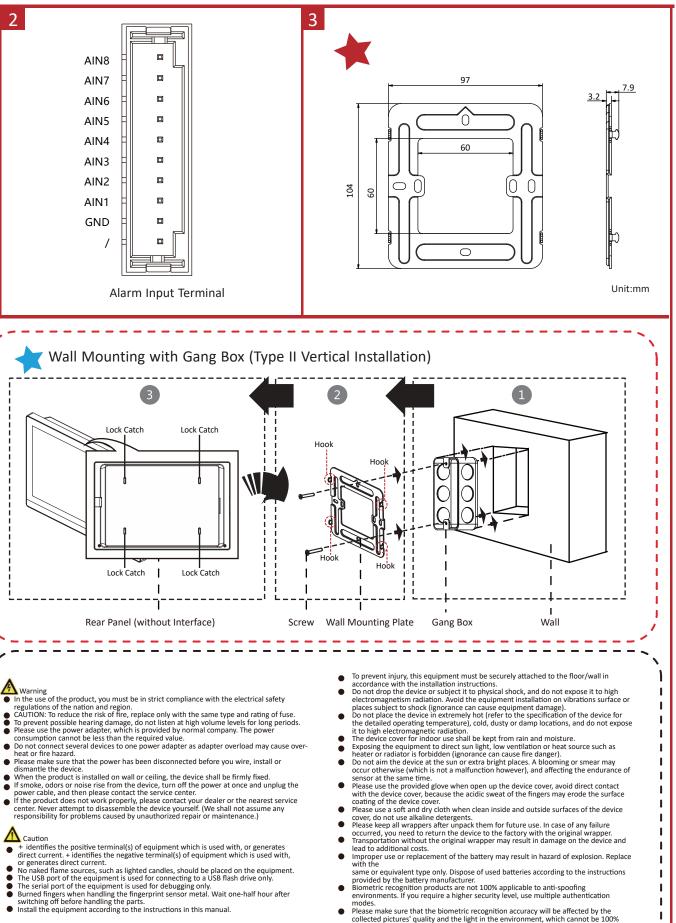

correct